




IMI CORNELIUS INC.
One Cornelius Place
Anoka MN 55303-6234
Telephone (800) 238-3600
Facsimile (612) 422-3246

INSTALLATION INSTRUCTION


UNIVERSAL 750 ICE BANK CONTROL KIT P/N 3626

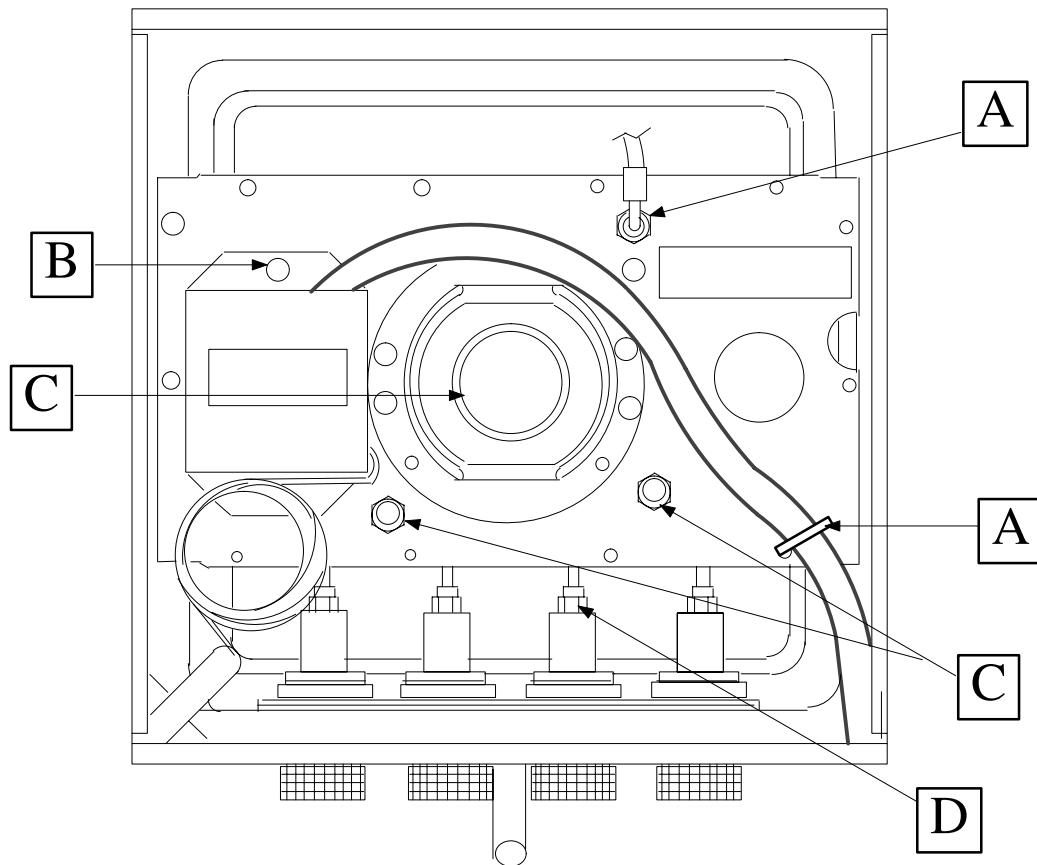

Step One


- A. Remove the product lines and white washers. Clip all poly ties.
- B. Unscrew the control box. Disconnect the cord and agitator motor electrical leads. Lay the control box over the side of the unit.
- C. Remove the agitator motor. Unscrew the hex nuts and screws holding the plate down. Remove the plate.
- D. Disconnect the tubes to the valves. Raise the basket and remove the ice bank control holder by bending the top brackets.

Step Two

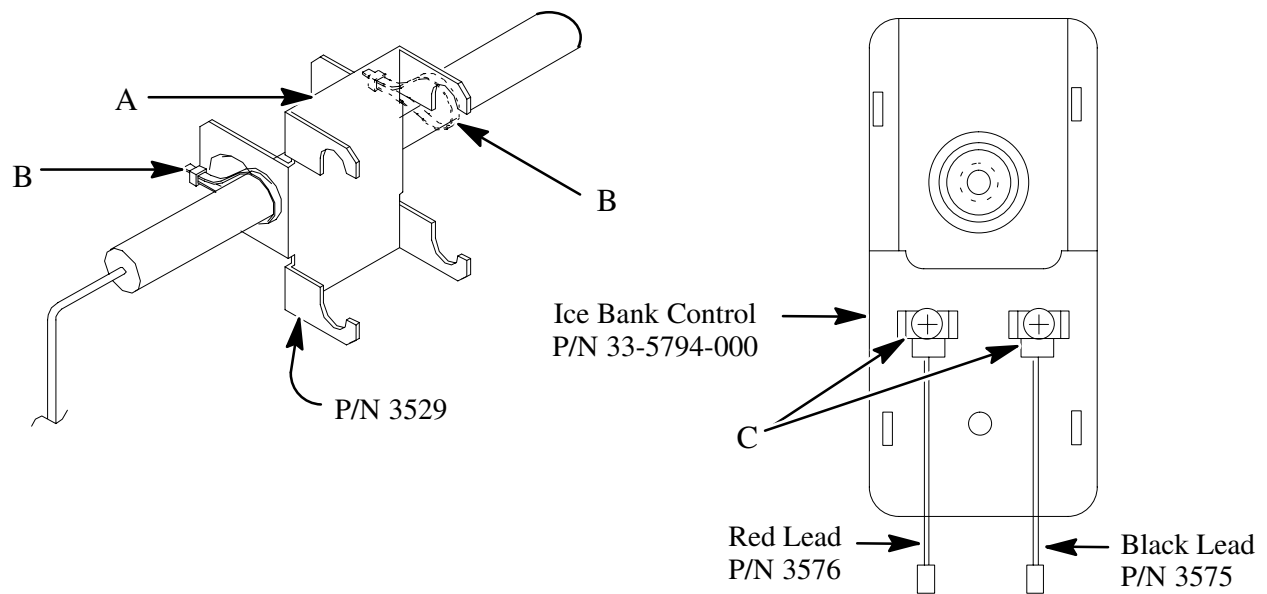

- A. Snap the new ice bank control bulb holder (P/N 3529) onto the second and third coil from the top.
- B. Place the ice bank control bulb into the holder and secure it with two poly ties (P/N 040056-000). Replace the basket and hook up the tubes to the valves.
- C. Connect the red and black wire leads to the ice bank control as shown.

Step Three

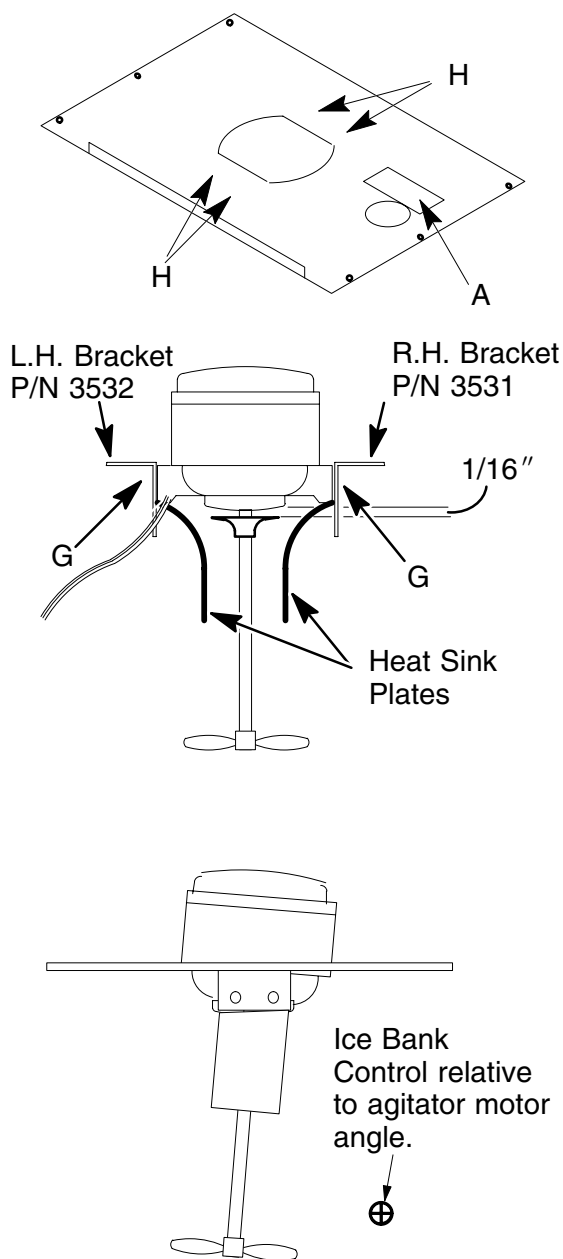

- Apply the Warning Decal (A) to the plate. Place the plate in the unit with the decal on the right hand side.
- Tighten the plate to the basket with the hex nuts. Apply the three screws to each side.
- Remove the agitator fan blade.
- Slide the rubber slinger off the shaft.
- Remove the heat sink plates and remove the cover.
- Replace the slinger onto the motor shaft. While the shaft is being pushed up into the motor, adjust the slinger to 1/16" clearance from the motor base.
- Apply heat sink compound (P/N 000113-734) between the brackets (G), heat sink plates and the agitator motor and assemble these parts as shown.
- Place the agitator motor assembly into the plate with the angle away from the ice bank control bulb. Mark the mounting holes (H) using the bracket as a template. Drill the four holes with a #29 drill bit. Place heat sink compound between the bracket and the plate and screw in place.
- Route the agitator motor electrical leads through the left rear hole in the plate.

Step Four

- Reconnect all product tubing. Be sure the tapered white nylon washers are in place.
- Route the tubing through the back hole of the panel and tie in place.
- Apply the DANGER decal to the top of the control box.
- Snap the grommet and the snap bushing into the holes of the control box as shown.
- Place the ice bank control in the control box with the capillary tube going through the grommet. Screw the ice bank control in place.
- Route the agitator motor electrical leads and the electrical cord through the snap bushing.
- Connect all wiring as shown.
- When connecting ground leads, be sure to attach power cord ground lead first then apply a nut and tighten. Then apply the ground lead from the agitator motor and then the final nut. Tighten securely

